





Operation Guide

Instruments (Continued) **Display Setting**

Following items to change sequentially

- Clock setting
- Backlight brightness adjustment
- Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode
- Setting of HISS Indicator
- E, II E type only Changing of speed and mileage unit
- Changing of fuel mileage meter unit
 - Press and hold SEL button and SET button
 - Press SET button







