


OIL RESERVOIR

The oil reservoir is contained within the lower crankcase and is filled through the oil filler opening ① located on the right crankcase cover. This oil is supplied to engine, transmission and clutch components by an oil feed pump.

The oil capacity is 3.2 U.S. qts. (3ℓ). Oil level must be checked with the motorcycle standing upright on level ground.

Measure oil level by inserting the dipstick until the filler cap ② touches the filler opening ① but is not screwed in. Oil level must be maintained between the upper ③ and lower ④ marks on the dipstick.

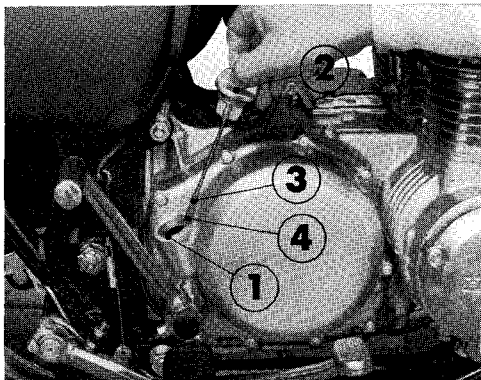

- ① Oil filler opening ② Oil filler cap
③ Upper level mark ④ Lower level mark