
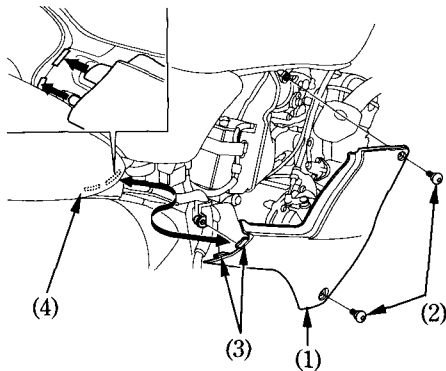


## SIDE COVER

The side covers (1) must be removed for the battery and air cleaner element maintenance. To remove the left side cover and right side cover:

1. Remove the seat.
2. Remove the bolts (2).
3. Pull the tabs (3) out from the rear cover (4) and remove the side cover (1).

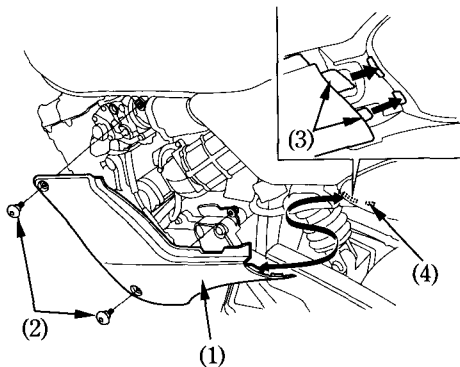

- (1) Side covers  
(2) Bolts

- (3) Tabs  
(4) Rear cover