


3. —Headlight bulb:

- Remove the seat rubber (4).
- Remove the headlight bulb (5) while pressing down on the pin (6).


4. —Position light bulb:

- Pull out the socket (7).
- Slightly press the position light bulb (8) and turn it counterclockwise.

5. Install a new bulb in the reverse order of removal.

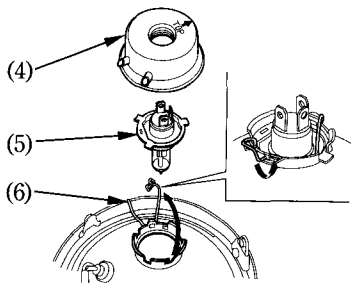

- (4) Seat rubber
- (5) Headlight bulb
- (6) Pin

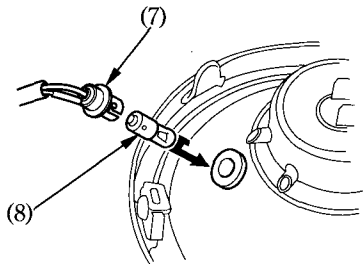

- (7) Socket
- (8) Position light bulb