

## FUSE REPLACEMENT

(Refer to the maintenance precautions on page 62).

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your Honda dealer for repair.

### CAUTION:

- \* Turn the ignition switch OFF before checking or replacing the fuses to prevent accidental short-circuiting.

### ▲WARNING

- \* Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.

Blown fuse

