


## Instruments *(Continued)*

### To reset the tripmeter, average fuel mileage and fuel consumption

- 1 To reset tripmeter A, average fuel mileage, and fuel consumption together, press and hold the **SET** button with tripmeter A, average fuel mileage, or fuel consumption displayed.

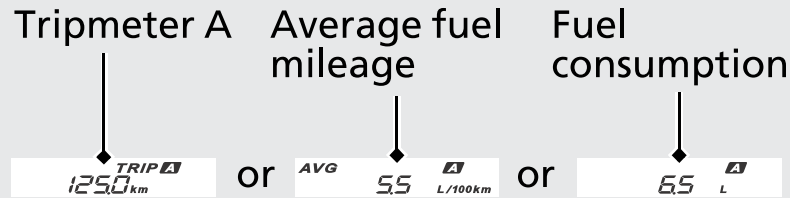


- 2 When they are reset, reset display appears at each indication.



- 3 Then, the display returns to the last selected indication.



- 4 To reset tripmeter B, press and hold the **SET** button with tripmeter B displayed.

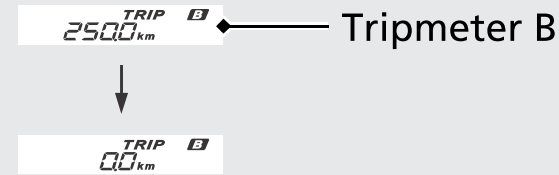

Also, the tripmeter A, average fuel mileage, and fuel consumption will automatically reset by refuelling more than the reserve amount and riding your motorcycle for 0.1 km (0.06 mile).

You can activate or deactivate the automatic reset mode by refuelling. **➡ P. 26**