

ITEMS	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								Refer to pages
			x 1,000 km	1	6	12	18	24	30	36	
			x 1,000 mi	0.6	4	8	12	16	20	24	
		MONTH		6	12	18	24	30	36		
DRIVE CHAIN			EVERY 1,000 km (600 mi) I, L								60-64
DRIVE CHAIN SLIDER					I			I		I	65
BATTERY				I	I	I	I	I	I	I	75-77
BRAKE FLUID		NOTE (5)		I	I	R	I	I	R		13-16
BRAKE PAD WEAR				I	I	I	I	I	I		74
BRAKE SYSTEM			I		I		I		I		13-16
* BRAKE LIGHT SWITCH					I		I		I		-
* HEADLIGHT AIM					I		I		I		-
CLUTCH SYSTEM			I	I	I	I	I	I	I		17-18
SIDE STAND					I		I		I		66
* SUSPENSION					I		I		I		-
* NUTS, BOLTS, FASTENERS			I		I		I		I		-
** WHEELS/TYRES					I		I		I		-
** STEERING HEAD BEARINGS			I		I		I		I		-

- \* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.
- \*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

- NOTES: (1) At higher odometer readings, repeat at the frequency interval established here.  
 (2) Service more frequently when riding in unusually wet or dusty areas.  
 (3) Service more frequently when riding in rain or at full throttle.  
 (4) Switzerland and Austria type only.  
 (5) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.