


3. Remove the bulb(3) by pressing in and turning counterclockwise.
4. Install a new bulb and check that the light operates properly.

**NOTE:**

- \* Do not use bulbs other than that specified.
- \* After installing a new bulb, check that the light operates properly.

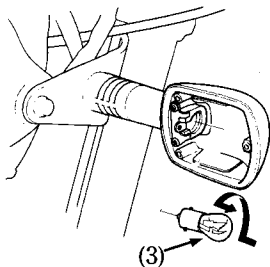

(3) Bulb