


## GENERAL DESCRIPTION


### SERIAL NUMBER LOCATION

The frame serial number ① is stamped on the left of the steering head pipe, and the engine serial number ② is located on top of the upper crankcase left side. These numbers are required when registering the

motorcycle and also for processing warranty claims. Further, when ordering spare parts, engine serial number for engine parts and frame serial number for frame parts should be stated.

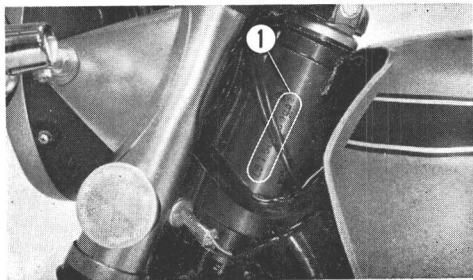

① Frame serial number

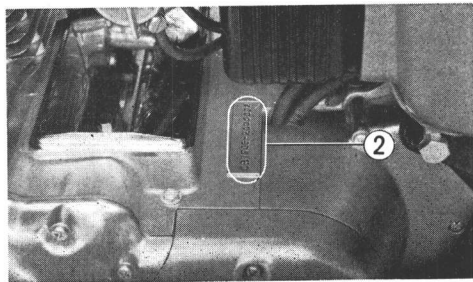

② Engine serial number