


● Ignition Switch

The three position ignition switch is located on top of the right handle grip switch housing. In the ON position (center) the ignition circuit will be completed and engine will operate. In the "OFF" position (either side of center) the ignition circuit will be open and the engine will not operate.

This switch is intended primarily as a safety or emergency switch and can nor-

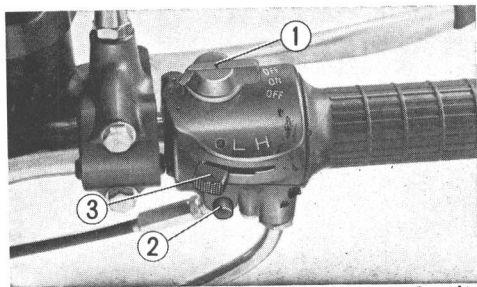

① Ignition switch ③ Headlight control switch
② Starter switch

mally remain in the "ON" position. The ignition will not operate unless the main key switch is in the "ON" position. When parking the motorcycle the main key switch must be turned to the "OFF", or parking position and the key should be removed.

● Starter Switch

This is a push button switch ② located directly below the headlight control switch ③. While the starter switch is depressed the starter motor will crank the engine. Refer to the section on STARTING THE ENGINE (page 24) for the correct starting procedure.

● Headlight (Control) Switch

The click type, sliding switch ③ is located on the right handle grip switch housing. It can be operated without taking the hand off the handle grip. The red dot is the "OFF" position (headlight and tail light off). "L" is the low beam position (low beam light and tail light on). "H" is the