

## SIDE COVER

The right side cover must be removed for the battery maintenance. The left side cover must be removed for air cleaner maintenance.


The right and left side covers can be removed in the same manner.

### Removal:

1. Remove the seat (page 46).
2. Remove the bolts (1).
3. Remove the prongs (2) from the grommets (3).
4. Pull the tabs (4) out from the fuel tank ribs (5) and remove the side cover (6).

### Installation:

- Installation can be done in the reverse order of removal.

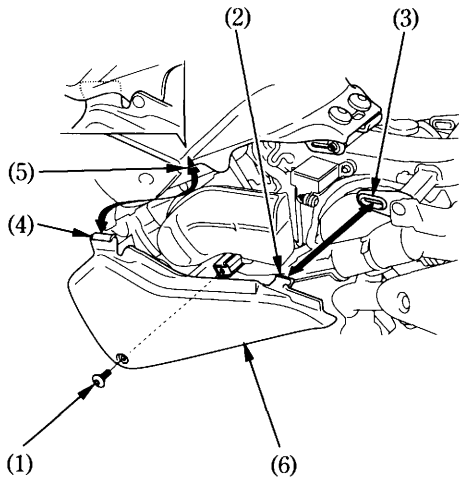

- |              |                    |
|--------------|--------------------|
| (1) Bolts    | (4) Tabs           |
| (2) Prongs   | (5) Fuel tank ribs |
| (3) Grommets | (6) Side covers    |