

| ITEM | FREQUENCY | WHICHEVER → COMES FIRST ↓ NOTE | ODOMETER READING [NOTE (1)] | | | | | | | | Refer to Page |
|---------------------------|-----------|--|-------------------------------|-----|----|----|----|----|----|----|---------------------|
| | | | × 1,000 km | 1 | 6 | 12 | 18 | 24 | 30 | 36 | |
| | | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | |
| | | MONTH | | 6 | 12 | 18 | 24 | 30 | 36 | | |
| DRIVE CHAIN | | | I, L EVERY 1,000km (600mi) | | | | | | | | 87 |
| DRIVE CHAIN SLIDER | | | | | I | | | I | | I | 93 |
| BRAKE FLUID | | NOTE (4) | | I | I | R | I | I | R | | 20 |
| BRAKE PAD WEAR | | | | I | I | I | I | I | I | | 103 |
| BRAKE SYSTEM | | | I | | I | | I | | I | | 20, 103 |
| * BRAKE LIGHT SWITCH | | | | | I | | I | | I | | — |
| * HEADLIGHT AIM | | | | | I | | I | | I | | — |
| CLUTCH SYSTEM | | | I | I | I | I | I | I | I | | 23 |
| SIDE STAND | | | | | I | | I | | I | | 95 |
| * SUSPENSION | | | | | I | | I | | I | | 94 |
| * NUTS, BOLTS, FASTENERS | | | I | | I | | I | | I | | — |
| ** WHEELS/TYRES | | | | | I | | I | | I | | — |
| ** STEERING HEAD BEARINGS | | | I | | I | | I | | I | | — |