


### Installation Notes:

- To install the rear wheel, reverse the removal procedure.
- Make sure that the lug (1) on the swingarm is located in the slot (2) on the rear brake caliper holder (3).
- Torque the axle nut to the specified torque.  
Axle nut torque:  
98 N•m (10,0 kgf•m)
- Adjust the drive chain.

When installing the wheel insert the brake disc carefully between the pads, taking care not to damage them. Also take care not to damage the ABS sensor (if present) on the rear caliper. (CBF1000A)

After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

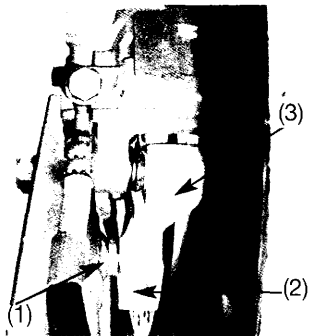

- (1) Lug
- (2) Slot
- (3) Rear brake caliper holder