


BRAKE LIGHTS SWITCH ADJUSTMENT

Refer to the Safety Precautions on page 73.

Check the operation of the brakelight switch (1) on the right side of the engine.

The switch can be adjusted by turning the adjusting nut (2). Turn the nut in direction (A) if operation of the brakelight switch is delayed, or in direction (B) if it is anticipated (too sensitive).

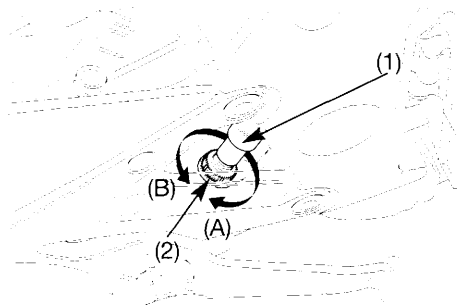

- (1) Brakelight switch
- (2) Adjusting nut