

# MAINTENANCE

page

## 57 MAINTENANCE

- 57 THE IMPORTANCE OF MAINTENANCE
- 58 MAINTENANCE SAFETY
- 59 SAFETY PRECAUTIONS
- 60 MAINTENANCE SCHEDULE
- 63 TOOL KIT
- 64 SERIAL NUMBERS
- 65 COLOUR LABEL
- 66 AIR CLEANER
- 67 CRANKCASE BREATHER
- 68 ENGINE OIL
- 74 SPARK PLUG
- 76 THROTTLE OPERATION
- 77 IDLE SPEED
- 78 DRIVE CHAIN
- 84 FRONT AND REAR SUSPENSION INSPECTION
- 85 SIDE STAND
- 86 WHEEL REMOVAL
- 91 BRAKE PAD WEAR

page

- 92 BRAKE SHOE WEAR
- 93 BATTERY
- 95 FUSE REPLACEMENT
- 98 BRAKELIGHT SWITCH ADJUSTMENT
- 99 BULB REPLACEMENT

## 105 CLEANING

## 108 STORAGE GUIDE

- 108 STORAGE
- 110 REMOVAL FROM STORAGE

## 111 SPECIFICATIONS

## 115 CATALYTIC CONVERTER

## 116 NOISE CONTROL SYSTEM (AUSTRALIA ONLY)