

## FUEL

### Fuel tank

The fuel tank is equipped with an automatic vacuum valve.

The fuel supply is assured whenever the engine is started and suspended as soon as the engine is stopped.

Fuel tank capacity inclusive of reserve capacity is:

19.0 ℓ


Reserve capacity is:

3.5 ℓ

To open the fuel fill cap (1), insert the ignition key (2) and turn it clockwise. The fuel fill cap will pop up and can be lifted off.

Do not overfill the tank. There should be no fuel in the filler neck (3).

After refueling, to close the fuel fill cap, push the fuel fill cap into the filler neck until it snaps closed and locks. Remove the key.

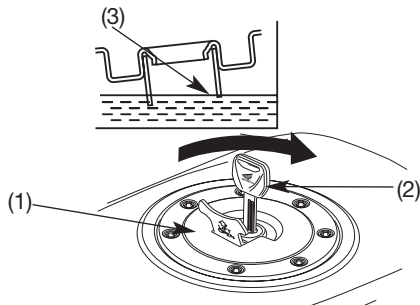

(1) Fuel fill cap

(2) Ignition key

(3) Filler neck

### **⚠ WARNING**

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks, and flame away.
- Refuel only outdoors.
- Wipe up spills immediately.