

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE
			x 1,000 km	1	6	12	18	24	30	36	
			x 1,000 mi	0.6	4	8	12	16	20	24	
		MONTH	6	12	18	24	30	36			
DRIVE CHAIN			I, L, EVERY 1,000 km (600 mi)								66-70
BATTERY			I	I	I	I	I	I	I	81-83	
BRAKE FLUID	(NOTE 4)		I	I	R	I	I	R		18-21	
BRAKE PAD WEAR			I	I	I	I	I	I		80	
BRAKE SYSTEM			I		I		I		I	18-21	
* BRAKE LIGHT SWITCH					I		I		I	86	
* HEADLIGHT AIM					I		I		I	—	
CLUTCH SYSTEM					I		I		I	22	
CLUTCH FLUID	(NOTE 4)			I	I	R	I	I	R	22	
SIDE STAND					I		I		I	72	
* SUSPENSION					I		I		I	71	
* NUTS, BOLTS, FASTENERS			I		I		I		I	—	
** WHEELS/TYRES					I		I		I	—	
** STEERING HEAD BEARINGS			I		I		I		I	—	

- \* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA service manual.
- \*\* In the interest of safety, we recommend these items be serviced ONLY by an authorized HONDA dealer.

NOTES:

1. At higher odometer reading, repeat at the frequency interval established here.
2. Service more frequently when riding in dusty areas.
3. Service more frequently when riding in rain or at full throttle.
4. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
5. Switzerland type only.