


# ESSENTIAL INDIVIDUAL COMPONENTS

## IGNITION SWITCH

The ignition switch (1) is below the indicator panel.

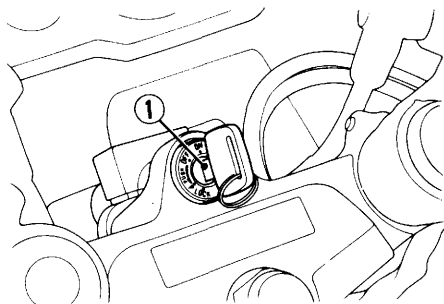

(1) Ignition switch

| Key Position            | Function  | Key Removal           |
|-------------------------|---|-----------------------|
| LOCK<br>(steering lock) | Steering is locked. Engine and lights cannot be operated.   | Key can be removed    |
| P (parking)             | For parking the motorcycle near traffic. The taillight and position light are on, but all other lights are off. The engine cannot be started. | Key can be removed    |
| OFF                     | Engine and lights cannot be operated.   | Key can be removed    |
| ON                      | Engine and lights can be operated.  | Key cannot be removed |