


6. Remove the two bolts (6).
7. Remove the lower fairing cover (7) and the screw (8).
8. Remove the short mount screw(9).
9. Remove the clip (10) from the plate (11).
10. Remove the three long mount screws (12) while holding the lower fairing.
11. Remove the lower fairing.

### Installation:

1. Installation can be done in the reverse order of removal.

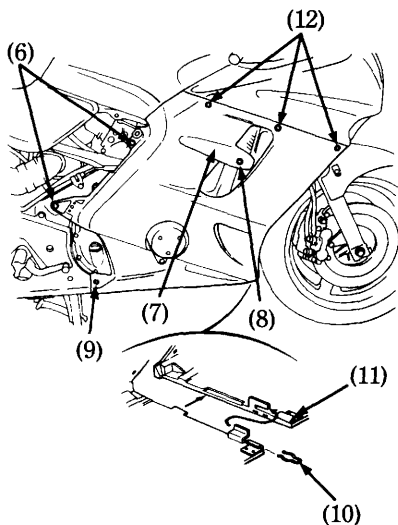

- |                        |                       |
|------------------------|-----------------------|
| (6) Bolt               |                       |
| (7) Lower fairingcover | (8) Screw             |
| (9) Short mount screw  | (10) Clip             |
| (11) Plate             | (12) Long mount screw |