

| (Ref. No.) Description | Function |
|---|--|
| (1) Speedometer | Shows riding speed. |
| (2) Tripmeter | Shows mileage per trip. |
| (3) Odometer | Shows accumulated mileage. |
| (4) Left turn signal indicator | Flashes when the left turn signal operates. |
| (5) Low oil pressure indicator (red) | <p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION:</p> <p>* Running the engine with insufficient oil pressure may cause serious engine damage.</p> |
| (6) Side stand indicator (amber) | Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 44) is activated. |