

MIDDLE COWL

The right and left middle cowls can be removed in the same manner.

Removal:

1. Remove the bolts A (1), bolt B (2) and clip A (3), clips B (4), clips C (5).
2. Remove the middle cowl (6) and disconnect the front turn signal connector (7).

Installation:

- Installation can be done in the reverse order of removal.