


Position Light Bulb

1. Remove the position light cover (1).
2. Turn the position light reflector (2) counterclockwise and remove it.
3. Pull out the bulb (3) without turning.
4. Install a new bulb in the reverse order of removal.

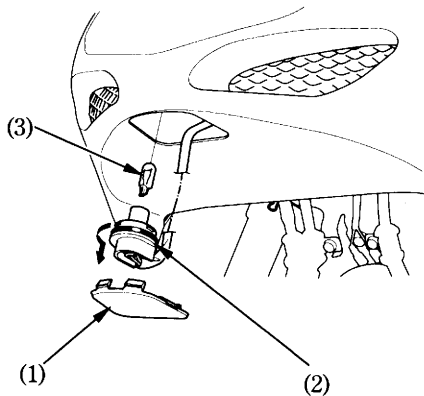

- (1) Position light cover
- (2) Position light reflector
- (3) Bulb