

You will need the key number if you ever have to replace a key. Store the plate in a safe place.

〈 Except U, BR type 〉

To reproduce keys, bring all keys, key number plate and motorcycle to your Honda dealer.

Up to four keys can be registered with the immobilizer system, including the ones in hand.

**NOTE:** 〈 Except U, BR type 〉

- \* If all keys are lost, the PGM-FI unit/ignition control module must be replaced. To avoid this possibility we recommend that if only one key is left, you immediately have it reproduced to ensure that a back-up is available.
- \* These keys contain electronic circuits that are activated by the immobilizer system. They will not work to start the engine if the circuits are damaged.
  - Do not grind, drill or in any way alter the original shape of the keys.
  - Do not drop the keys or set heavy objects on them.
  - Keep the keys away from magnetic objects.