

## FRAME/BODY PANELS/EXHAUST SYSTEM

Remove the muffler mounting bolt, collar and mounting rubber.



Remove the exhaust pipe mounting bolt, nut, washer, collar and mounting rubbers.

Remove the muffler and exhaust pipe as assembly. Remove the exhaust pipe gasket.



## DISASSEMBLY/ASSEMBLY

