

MAINTENANCE

FUEL LINE

Remove the fuel tank (page 5-3).

Check the fuel lines for deterioration, damage or leakage. Replace the fuel line if necessary.




THROTTLE OPERATION

Check for smooth throttle grip full operating and automatic full closing in all steering positions. Check the throttle cable and replace it if it is deteriorated, kinked or damaged.

Lubricate the throttle cable, if throttle operation is not smooth.


Measure the free play at the throttle grip flange.

FREE PLAY: 2 – 6 mm (1/12 – 1/4 in)

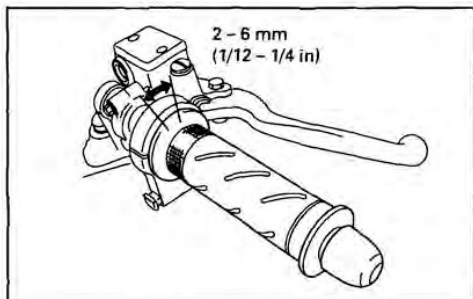

Throttle grip free play can be adjusted at either end of the throttle cable.

Minor adjustments are made with the upper adjuster. Adjust the free play by loosening the lock nut and turning the adjuster.

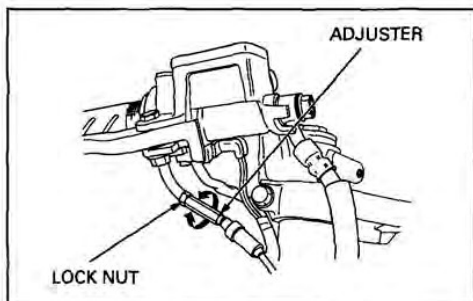

Major adjustments are made with the lower adjuster.

Remove the fuel tank (page 5-3).

Remove the bolt and PAIR control valve with tubes connected.

Disconnect the air injection hose from the cylinder head cover.

