


STATOR INSTALLATION

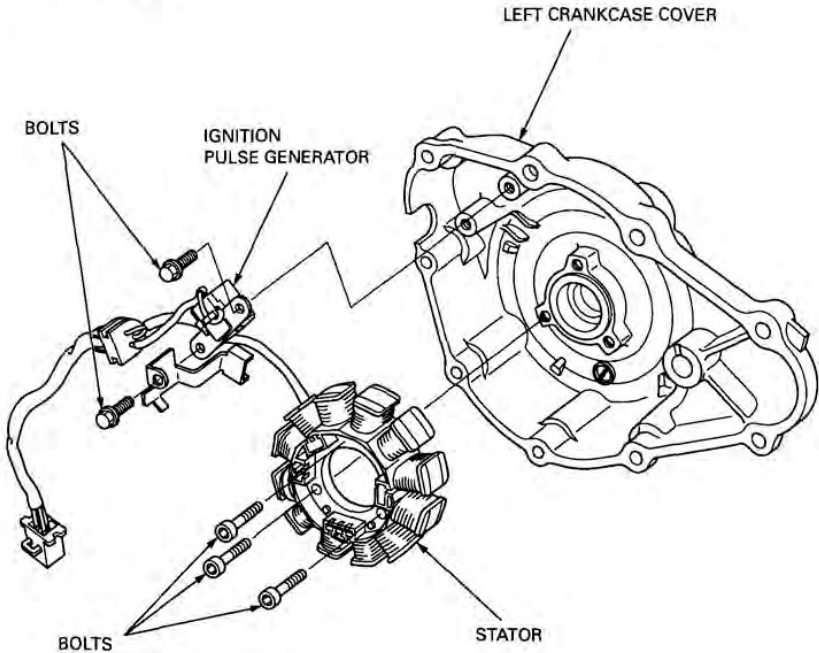


Place the stator into the left crankcase cover. Apply liquid sealant to the wire grommet seating surface and install the grommet into the cover groove.

Apply locking agent to the ignition pulse generator and stator mounting bolts threads. Route the wire properly and tighten the two ignition pulse generator mounting bolts.

TORQUE: 5.2 N·m (0.53 kgf·m, 3.8 lbf·ft)

Tighten the three stator mounting bolts.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

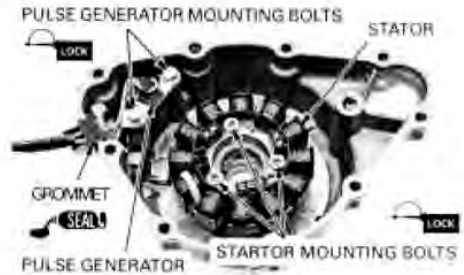

FLYWHEEL REMOVAL

Remove the left crankcase cover (page 9-2).

Hold the flywheel with the special tool and loosen the flywheel nut.

TOOL:

Flywheel holder

07725 - 0040000

Remove the flywheel nut and washer.

