

## LEFT CRANKCASE COVER INSTALLATION

Install the dowel pin and a new gasket.



Install the left crankcase cover.  
Install the washer and bolts, and tighten them securely.

Install the drive sprocket cover (page 7-6).  
Connect the alternator 4P connector (page 17-7).

