



BRAKE SYSTEM

ASSEMBLY

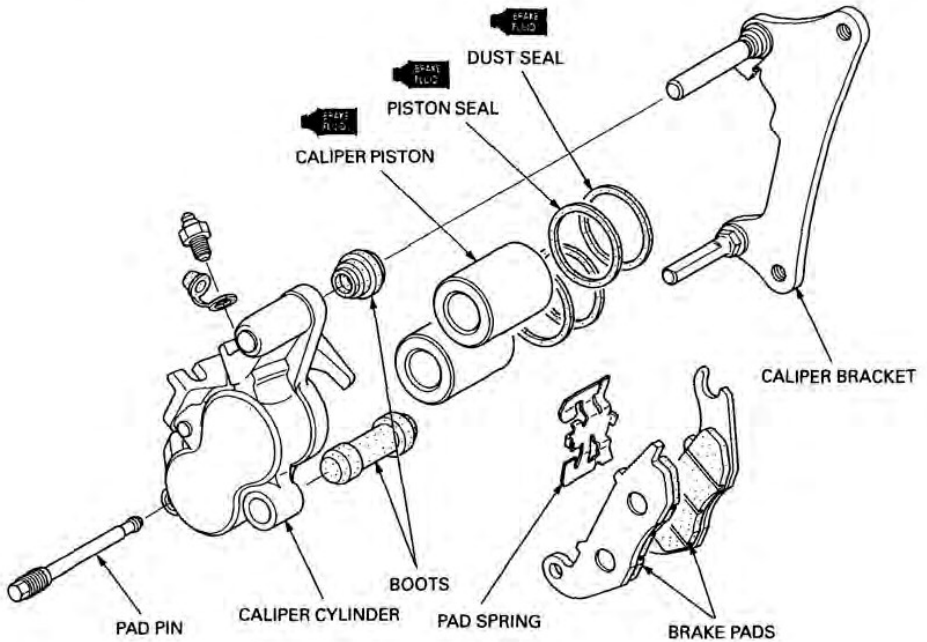

Coat the new piston seals and dust seals with clean brake fluid and install them in the seal grooves of the caliper.

Lubricate the caliper cylinders and pistons with clean brake fluid and install the pistons into the caliper cylinders with the opening towards the pads.

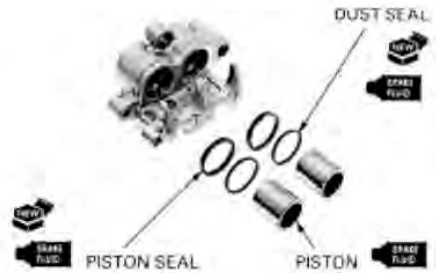

If the caliper and bracket pin boots are hard or deteriorated, replace them with new ones.

Apply silicone grease to the bracket pin boots and bracket pins and install them making sure that they are seated in the bracket pin grooves properly.

Install the pad spring on the caliper.

Assemble the caliper bracket and caliper body.

