


4. Remove the right under cowl (7) by removing the bolt C (8), bolt D (9) and screw (10).

Installation:

- Installation can be done in the reverse order of removal.

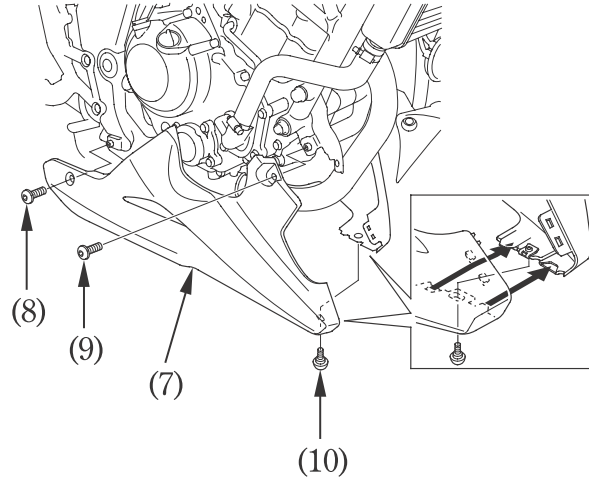

- |                      |            |
|----------------------|------------|
| (7) Right under cowl | (9) Bolt D |
| (8) Bolt C           | (10) Screw |