


Main Fuse:

The main fuse (1) is located on the starter magnetic switch near the battery.

The specified fuse is:

30 A

1. Turn the ignition switch OFF before checking or replacing the fuse to prevent an accidental short-circuit.
2. Remove the rear and front seats (pages 47 , 48).
3. Disconnect the wire connector (2) of the starter magnetic switch.
4. Pull out the old fuse and install a new fuse. The spare main fuse (3) is attached to the battery cover.
5. Reconnect the connector.
6. Install the remaining parts in the reverse order of removal.

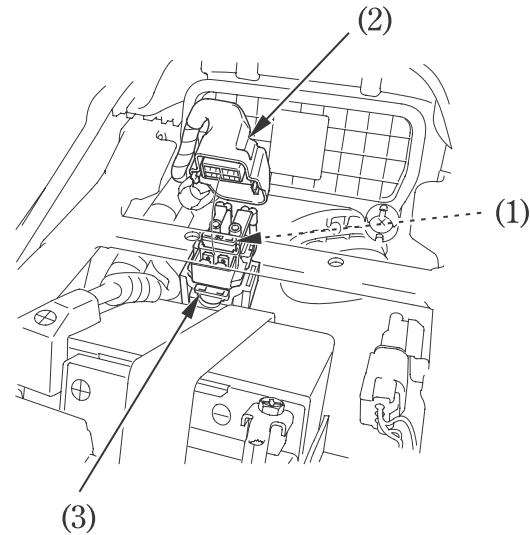

(1) Main fuse

(2) Wire connector

(3) Spare main fuse