


FRONT COWL

The right and left front cowls can be removed in the same manner.

Removal:

1. Remove the clips (1).
2. Remove the screws (2).
3. Remove the bolts A (3).

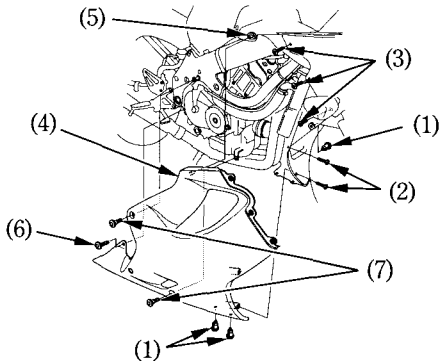


- (1) Clips
(2) Screws

(3) Bolts A

4. Pull out the hooks (4) from the grommets (5).
5. Remove the bolts B (6).
6. Remove the bolts C (7).

Installation:

- Installation can be done in the reverse order of removal.
- Run the tubes through the clip of the left front cowl.

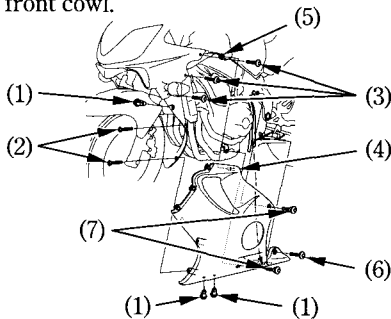

- (4) Hooks
(5) Grommets

- (6) Bolts B
(7) Bolts C