



Do not depress the brake lever when the caliper assembly is removed. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your Honda dealer for this service.

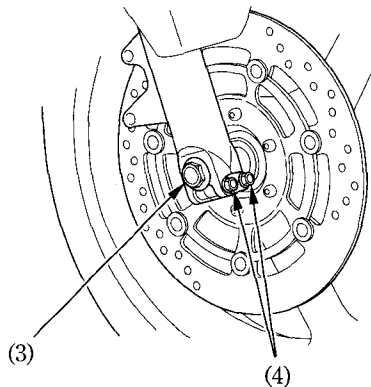

- (3) Front axle bolt
- (4) Axle pinch bolts

- 3. Remove the front axle bolt (3), and then loosen the right and left front axle pinch bolts (4).
- 4. Withdraw the front axle shaft (5) and remove the front wheel.

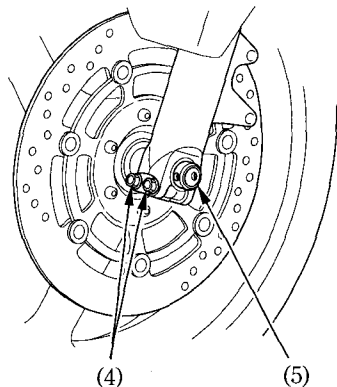

- (4) Axle pinch bolts
- (5) Front axle shaft