


SPARK PLUGS

(Refer to the maintenance precautions on page 63).

Recommended plugs:


Standard:

CR9EH9 (NGK) or
U27FER9 (NIPPONDENSO)

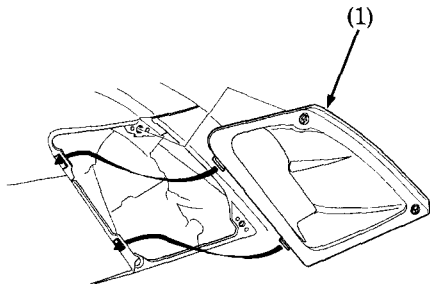

(1) Maintenance lid

1. Remove the right and left maintenance lids (1) (page 44) to remove the spark plugs.
2. Disconnect the spark plug caps from the spark plugs.
3. Clean any dirt from around the spark plug bases.
Remove the spark plugs using the spark plug wrench (2) furnished in the tool kit.

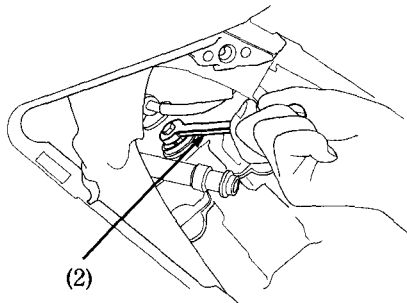

(2) Spark plug wrench