


MAINTENANCE LID/LOWER FAIRING

Maintenance Lid

1. To remove the maintenance lid (1), remove two screws (2).
2. Pull the maintenance lid (1) out by releasing the tabs (3) from the fairing.

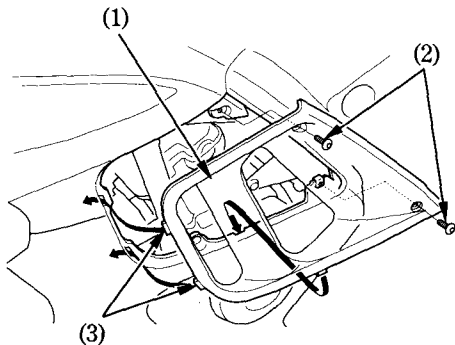

- (1) Maintenance lid
- (2) Screws
- (3) Tabs

Lower Fairing

1. Remove the maintenance lid.
2. Pull the clips (4) out to the first detent position.
3. Remove the quick-release screw (5) and screw (6).
4. Remove the short mount screws (7) and long mount screw (8) by holding the lower fairing (9).
5. Remove the lower fairing by releasing the tabs (10).