

(Ref. No.) Description	Function
(8) Immobilizer system indicator	This indicator lights for a few seconds when the ignition switch is turned ON. It will then go off if the properly-coded key has been inserted. If an improperly-coded key has been inserted, the indicator will remain on and the engine will not start. (page 39)
(9) Coolant temperature gauge	Shows coolant temperature (see page 12).
(10) Odometer/tripmeter display	Shows odometer and tripmeter (page 13).
Odometer	Shows accumulated mileage.
Tripmeter	Shows mileage per trip.
(11) Odometer/tripmeter select and reset button	Resets the tripmeter or select the operation mode: tripmeter or odometer (page 13).
(12) Fuel reserve indicator	Lights when there is only few fuel left in the tank. about: 3.0 ℓ (0.79 US gal , 0.66 Imp gal)
(13) Neutral indicator	Lights when the transmission is in neutral.