

(Ref.No.) Description	Function
(15) RESET button	<p>This button is used to reset the tripmeter (page 26) or to adjust the time (page 28).</p> <p>E, III E type: This button is used to reset the tripmeter or to adjust the time or to change the speed and mileage units for the speedometer/odometer/tripmeter (page 27).</p>
(16) SEL button	<p>This button is used to select the odometer, tripmeter A and tripmeter B (page 26) or to adjust the time (page 28).</p>