


Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Push and hold both the SEL button (2) and RESET button (3) for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.

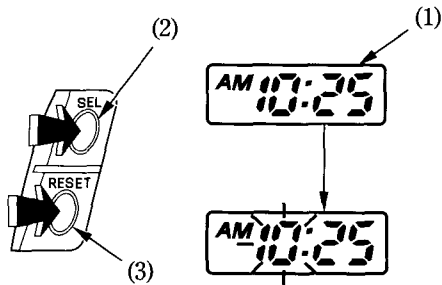

- (1) Digital clock
- (2) SEL button
- (3) RESET button

3. To set the hour, push the RESET button until the desired hour and AM/PM are displayed.

- The time is advanced by one hour, each time the button is pushed.
- The time advances fast when the button is pushed and held.

