


4. If required, remove the lower cowl (page 71) and oil filler cap (4), and add the specified oil (page 98) up to the upper level mark. Do not overfill.
5. Reinstall the oil filler cap and lower cowl. Check for oil leaks.

**NOTICE**

Running the engine with insufficient oil pressure may cause serious engine damage.

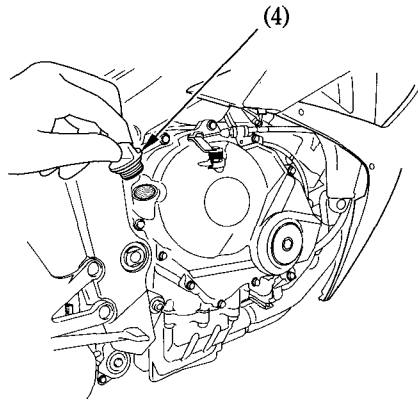

(4) Oil filler cap