

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]								REFER TO PAGE	
			× 1,000 km	1	6	12	18	24	30	36		
			× 1,000 mi	0.6	4	8	12	16	20	24		
			MONTH									
	DRIVE CHAIN			EVERY 1,000 km (600 mi) I, L								112
	DRIVE CHAIN SLIDER					I		I		I	118	
	BRAKE FLUID	NOTE (3)			I	I	R	I	I	R	36, 38	
	BRAKE PADS WEAR				I	I	I	I	I	I	128, 129	
	BRAKE SYSTEM			I		I		I		I	36-38, 128-129	
*	BRAKELIGHT SWITCH					I		I		I	135	
*	HEADLIGHT AIM					I		I		I	73	
	CLUTCH SYSTEM			I	I	I	I	I	I	I	39	
**	EXHAUST GAS CONTROL VALVE CABLE			EVERY 24,000 km (16,000 mi) I								-
	SIDE STAND					I		I		I	120	
*	SUSPENSION					I		I		I	119	
*	NUTS, BOLTS, FASTENERS			I		I		I		I	-	
**	WHEELS/TYRES					I		I		I	-	
**	STEERING HEAD BEARINGS			I		I		I		I	-	