

18. Reinstall the ignition coils.
19. Connect the ignition coil connectors to the ignition coils as before removal.
20. Install the remaining parts in the reverse order of removal.