


Position Light

Position light use some LED.

If there is a LED which is not turned on, see your Honda dealer for this service.

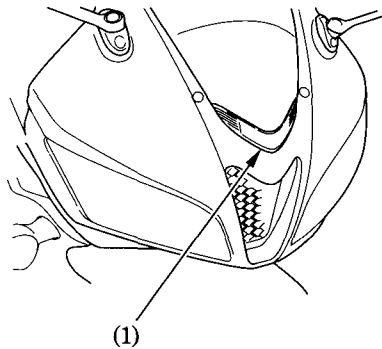

(1) Position light