


Electrical Trouble ▶ Blown Fuse

■ Main Fuse

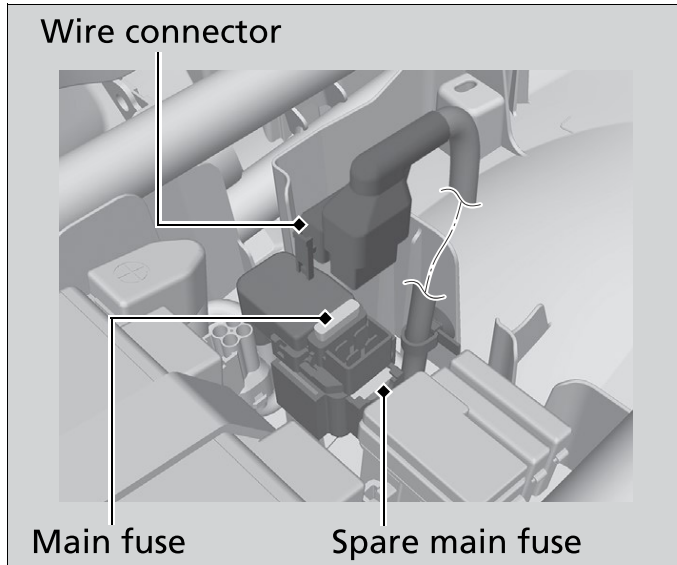

1. Remove the seat. P. 58
2. Disconnect the wire connector of the starter magnetic switch.

3. Pull the main fuse out and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
▶ Spare main fuse is provided in the starter magnetic switch.
4. Install the parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.