


Digital clock

Shows hour and minute. To adjust time, proceed as follows :


1. Turn the ignition switch ON.
2. Press the left control button while pressing the right control button. The clock will be set in the adjust mode with the minute display flashing.

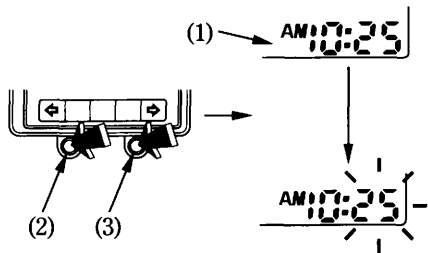

- (1) Digital clock
- (2) Left control button
- (3) Right control button

3. Set hour and minute.

- The clock will alternate between the hour and minute adjust modes each time the left control button is pressed.

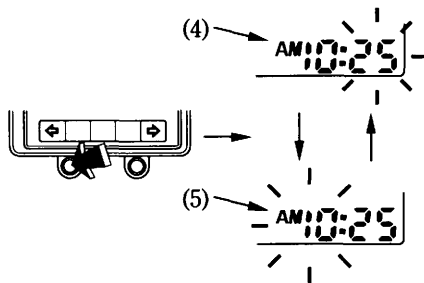

- (4) Minute adjust mode
(Minute display flashing)
- (5) Hour adjust mode
(Hour display flashing)