


IGNITION SWITCH

The ignition switch (1) is located at the bottom of the indicator panel.

Key position	Key removal	Function	Usable electrical equipment (Each has its own switch)
LOCK	Removable	Steering is locked.	Electrical equipment cannot be used.
P2	Removable	Night Parking. Position, taillights on. Meter illuminating lamps on.	Meter stop, meter stop pilot lamp, brief box lamp.
OFF	Removable	Engine is stopped.	Electrical equipment cannot be used.
P1	Unremovable	Engine is stopped with the meter held in position.	Meter stop, meter stop pilot lamp, brief box lamp, rotary beam.
ON	Unremovable	Engine is started. For daytime/night operating.	All electrical equipment can be used except rotary beam.

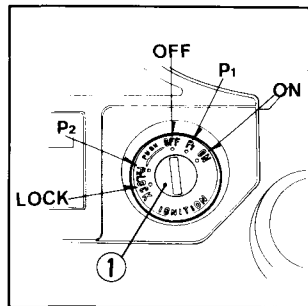

NOTE: Always remove the key when leaving the motorcycle.