

If Your Engine Overheats

- Check the coolant level in the reserve tank, located behind the maintenance lid (page 101).
If the reserve tank is low or empty, don't ride without adding coolant (page 101).
After adding coolant, ride at moderate speeds (10 mph, 16 km/h). If the high coolant temperature indicator lights again, do not ride. The engine needs repair. Transport your scooter to a Honda dealer (page 142).
If the temperature drops to normal, check the coolant level. If it has gone down, add more coolant.

If you are able to resume riding, continue to monitor the high coolant temperature indicator frequently.

If there's a mild leak, you can ride for awhile, carefully watching the indicator. Be prepared to stop and add more coolant or water. If the leak is bad, transport your scooter to a Honda dealer (page 142).