

## Instruments & Controls

---

This section shows the location of all gauges, indicators, and controls you would normally use before or while riding your scooter.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations .....	14
Gauges & Indicators .....	17
Controls & Features.....	20
Ignition Switch .....	20
Start Button.....	22
Engine Stop Switch .....	22
Headlight Dimmer Switch .....	23
Turn Signal Switch.....	23
Horn Button.....	24
Rear Brake Lock.....	24
Seat Lock.....	26
Center Stand Lock.....	27