

Engine Idle Speed

The best way to assure proper carburetion is to see your Honda dealer for regularly scheduled servicing, including carburetor adjustment.

Remember, idle speed adjustment is not a “cure-all” for other problems in your engine’s fuel-delivery system. Adjusting the idle will not compensate for a fault elsewhere.


The engine must be at normal operating temperature for accurate idle speed adjustment.

For information about high altitude carburetor adjustment, see page 176 .

Idle Speed Adjustment

Refer to *Safety Precautions* on page 70 .

UNDER SEAT

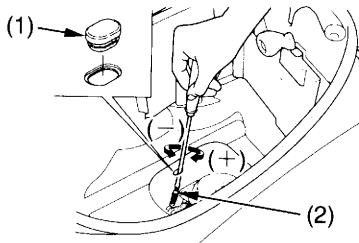

- (1) rubber plug (+) increase
(2) throttle stop screw (–) decrease

1. If the engine is cold, start it and warm it up with 10 minutes of stop-and-go riding. Stop the engine. (cont'd)