



WHEELS & TYRES

The tyres are the only point of contact between your motorcycle and the road. Safety under any riding conditions is dependant upon this small point of contact. Please understand that the tyres will have less grip, as the tread wear decreases.

To safely operate your motorcycle, the wheels and tyres must be the proper type (off-road) and size. Also, your tyres must be in good condition with adequate tread, and correctly inflated.

It is important to properly replace parts according to the replacement schedule. We recommend that you leave this work to the experts with the proper equipment and experience.

Wheels that are deformed or damaged must be replaced. And when the tyre is punctured, it is essential to stop as soon as possible, and inspect the tyre by removing the tyre. Please consult your dealer for tyre repair and replacement.

