


Installation:

1. Reverse the removal procedure. Make sure that the lug (1) on the swingarm is located in the slot (2) in the brake panel. Tighten the axle nut to:  
62 N·m (6.3 kgf·m, 46 lbf·ft)
2. Adjust the drive chain (pages 77 – 78).
3. Adjust the rear brake (page 23).
4. Apply the brake several times and check for free wheel rotation after the brake pedal is released.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

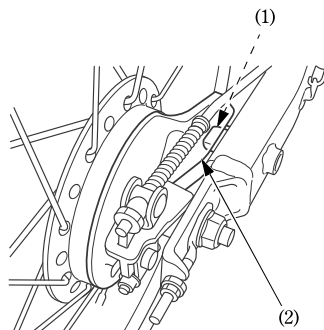

(1) Lug

(2) Slot