

Free Play Adjustment:

Measure the throttle grip free play at the throttle grip flange.

The standard free play should be approximately:



2 – 6 mm (0.1 – 0.2 in)

To adjust, pull the rubber dust cover (2) back. Loosen the lock nut (3) and turn the adjuster (4).

Tighten the lock nut and return the dust cover to its normal position.

After adjustment, check for smooth rotation of the throttle grip from fully closed to fully open in all steering positions.

If proper throttle free play cannot be achieved, contact your Honda dealer.

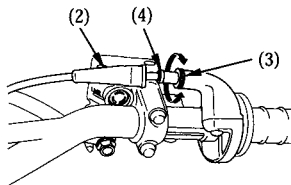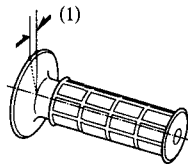

(1) Free play
(2) Dust cover

(3) Lock nut
(4) Adjuster